

Fig. 4

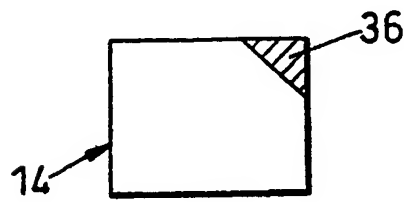


Fig. 5a

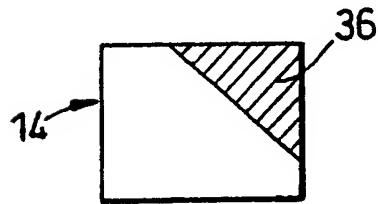


Fig. 5b

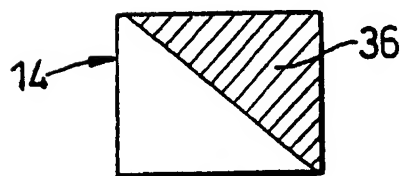


Fig 5c

3/11

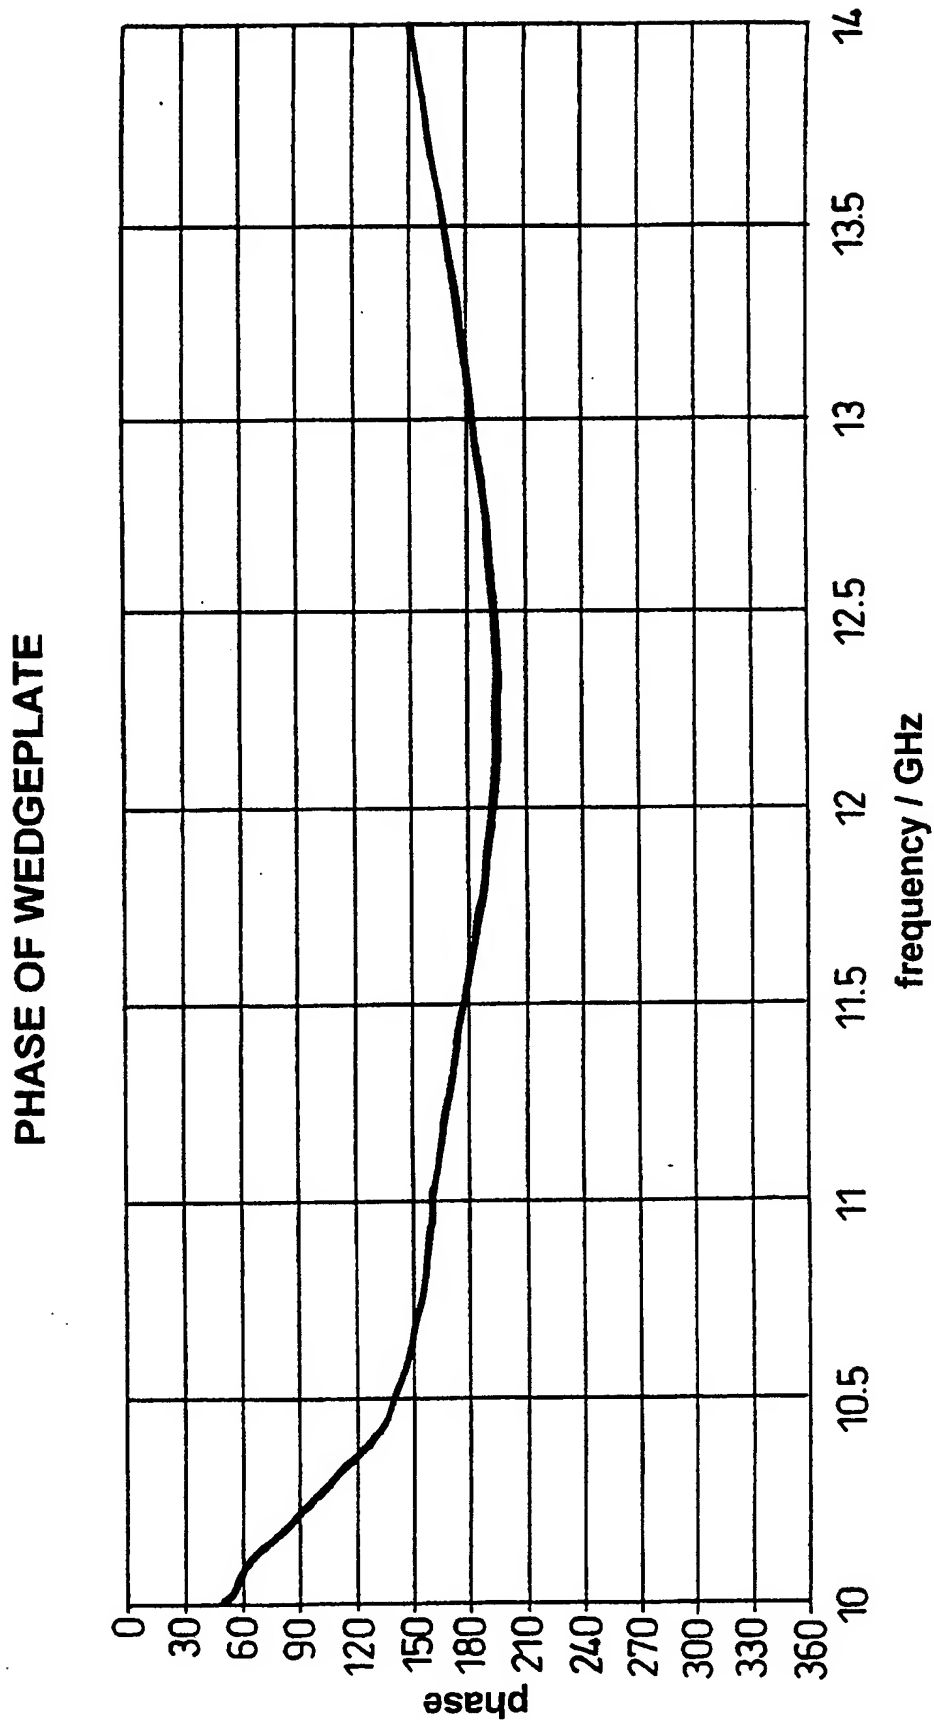


Fig. 6

4/11

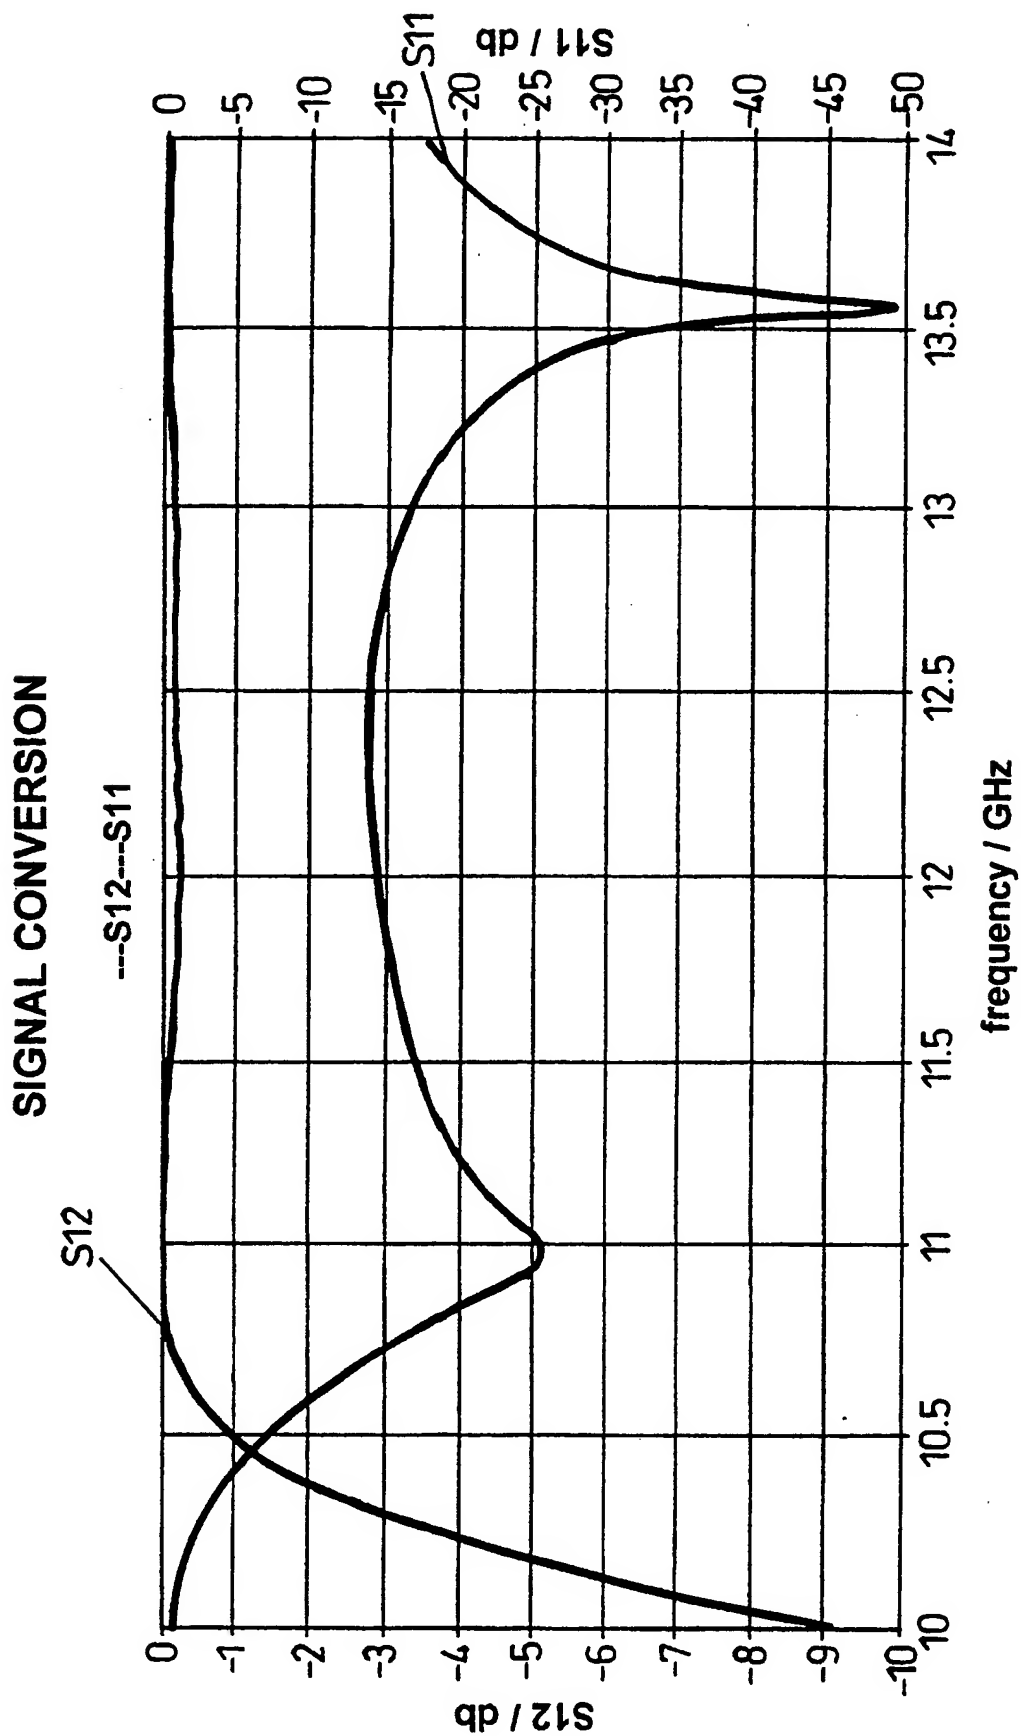


Fig. 7

5/11

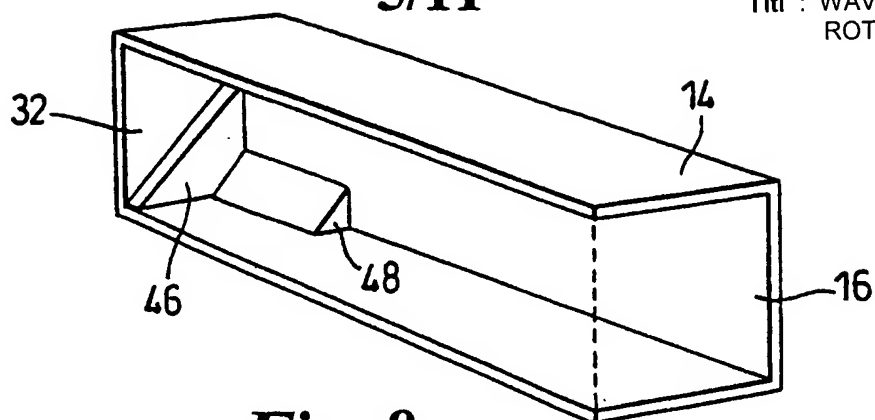


Fig. 8

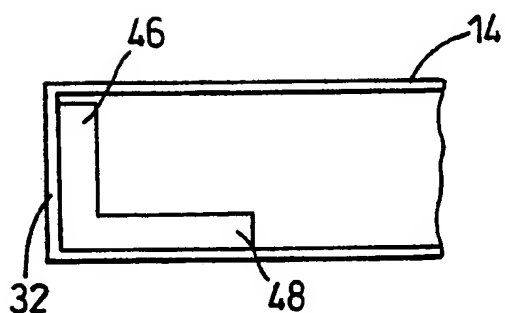


Fig. 9

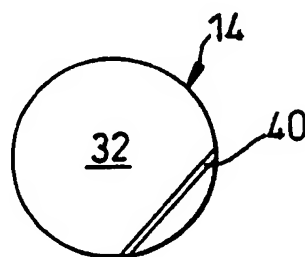


Fig. 13a

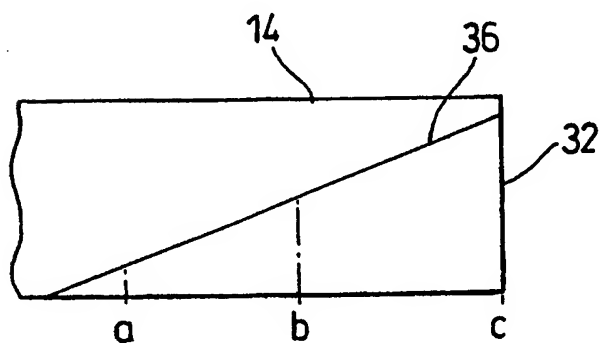


Fig. 12

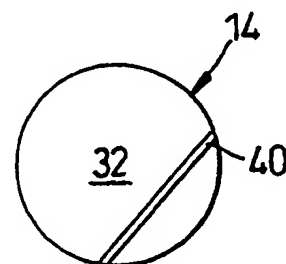


Fig. 13b

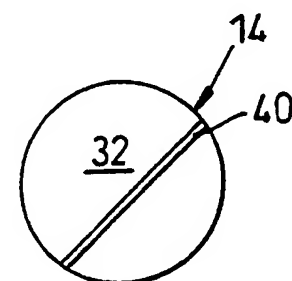


Fig. 13c

PHASE OF STEPPED WEDGE

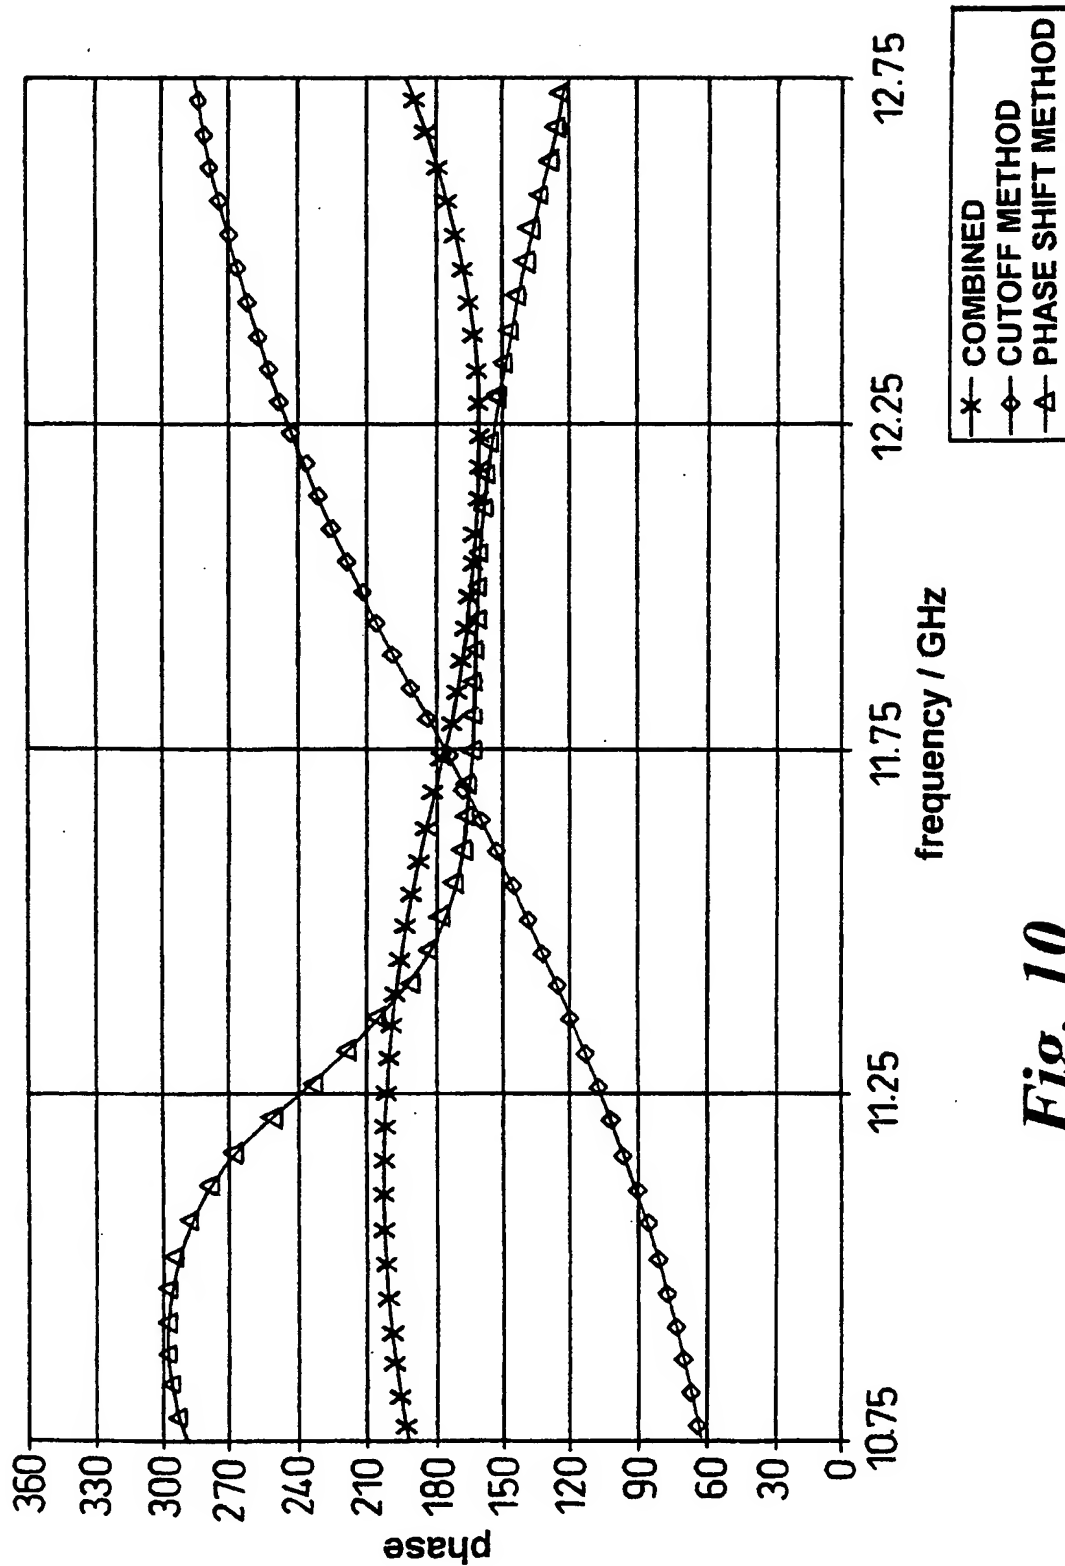


Fig. 10

7/11

SIGNAL CONVERSION

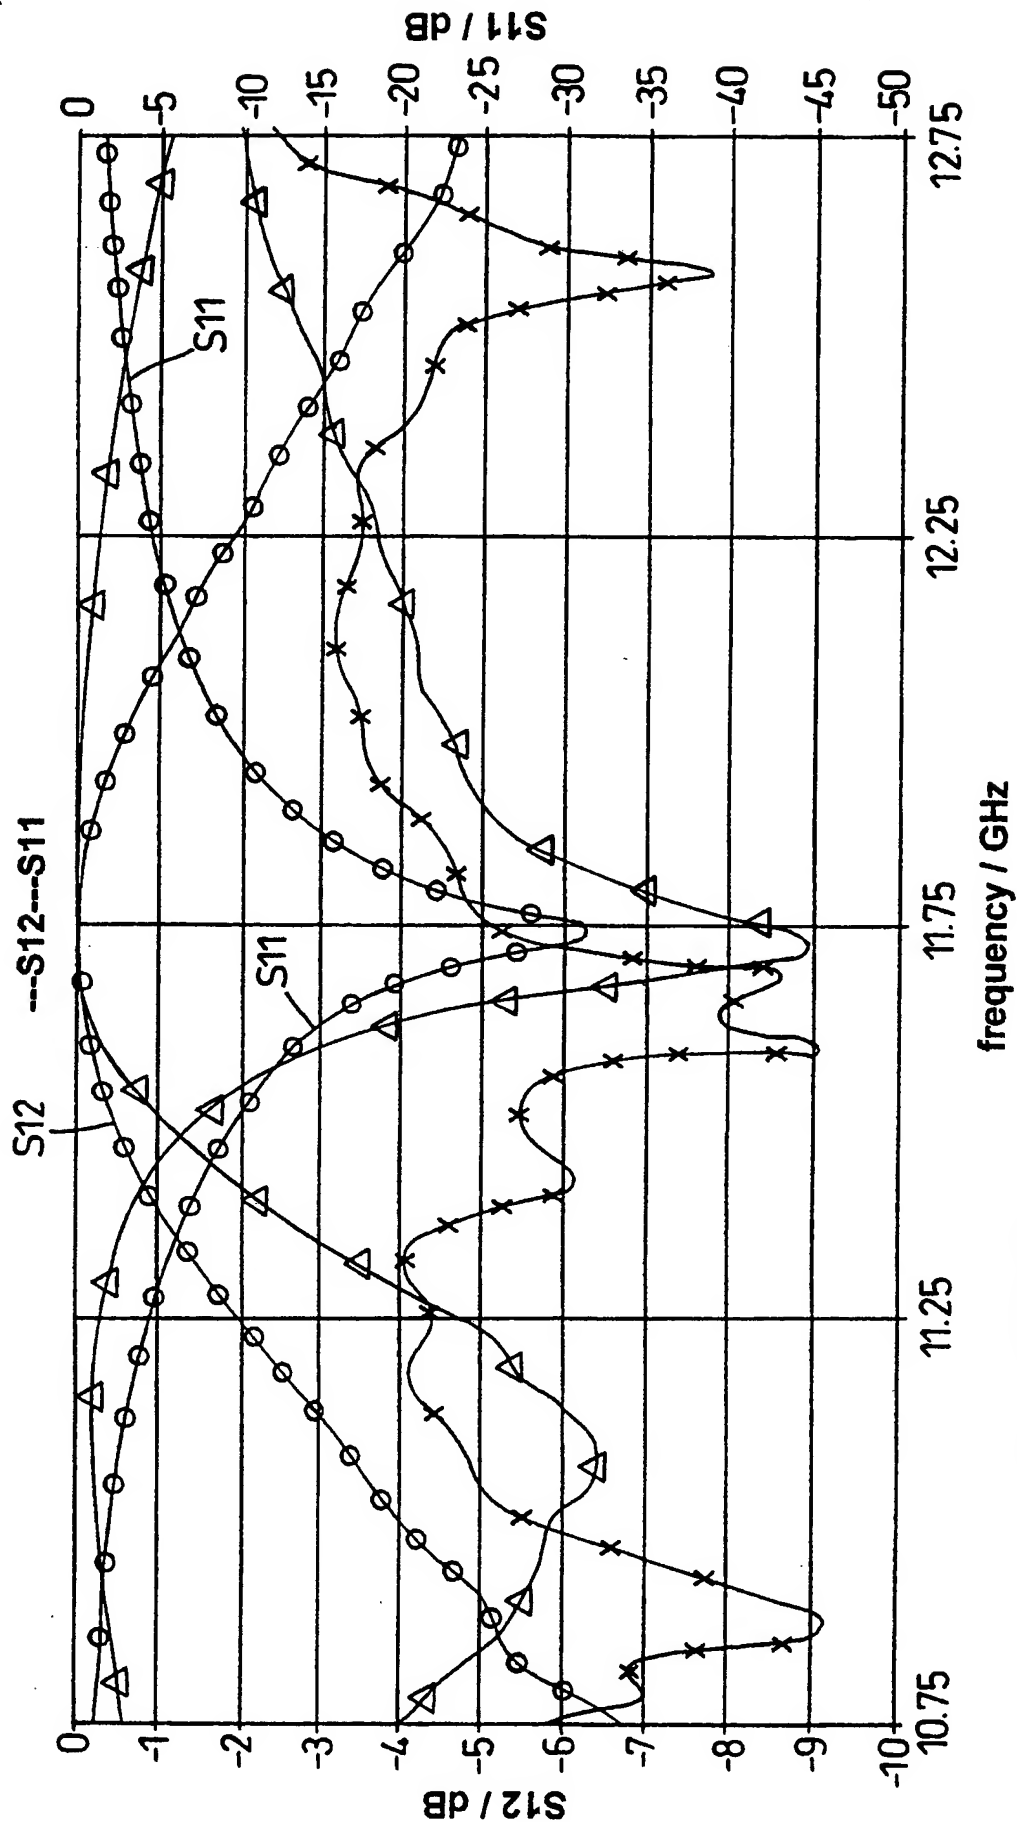


Fig. 11

8/11

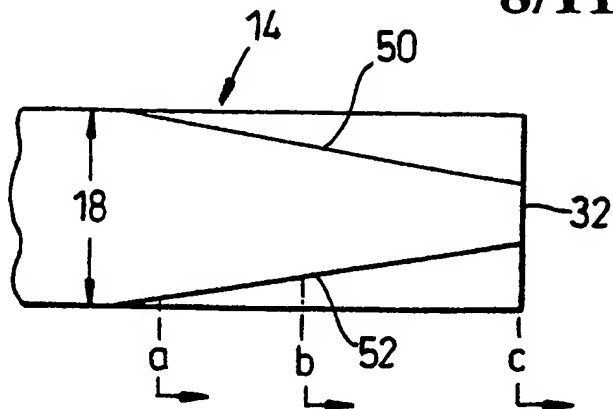


Fig. 14

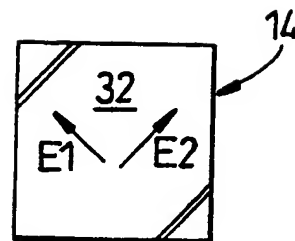


Fig. 15a

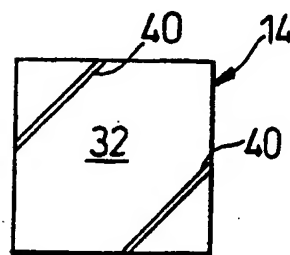


Fig. 15b

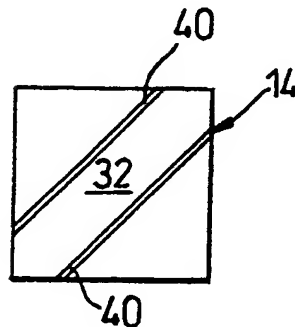


Fig. 15c

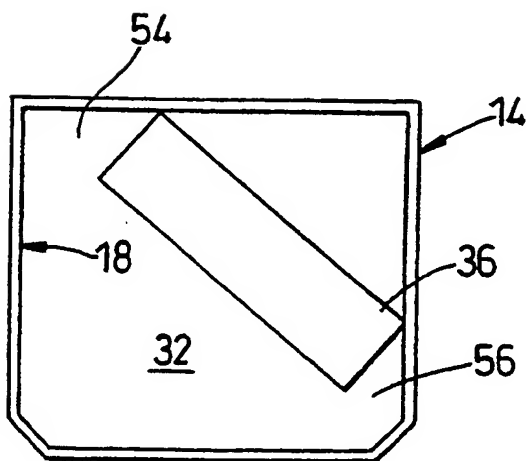


Fig. 16

9/11

PHASE OF WEDGEPLATE


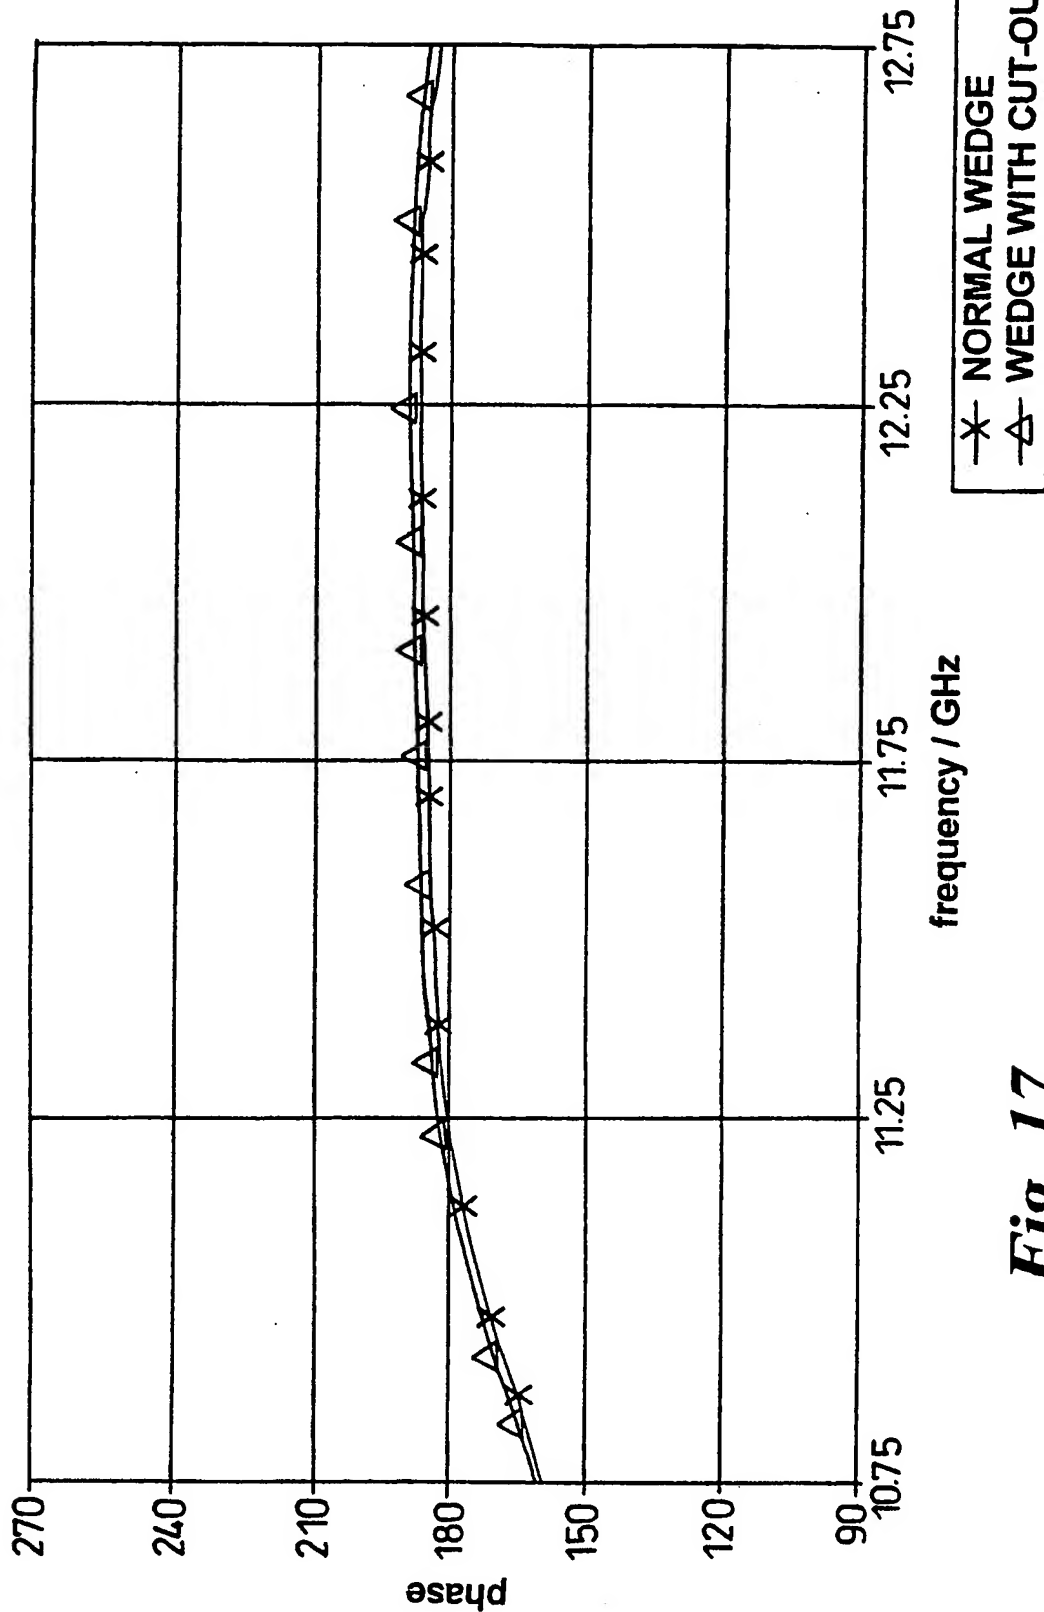


Fig. 17

10/11

SIGNAL CONVERSION

---S12---S11

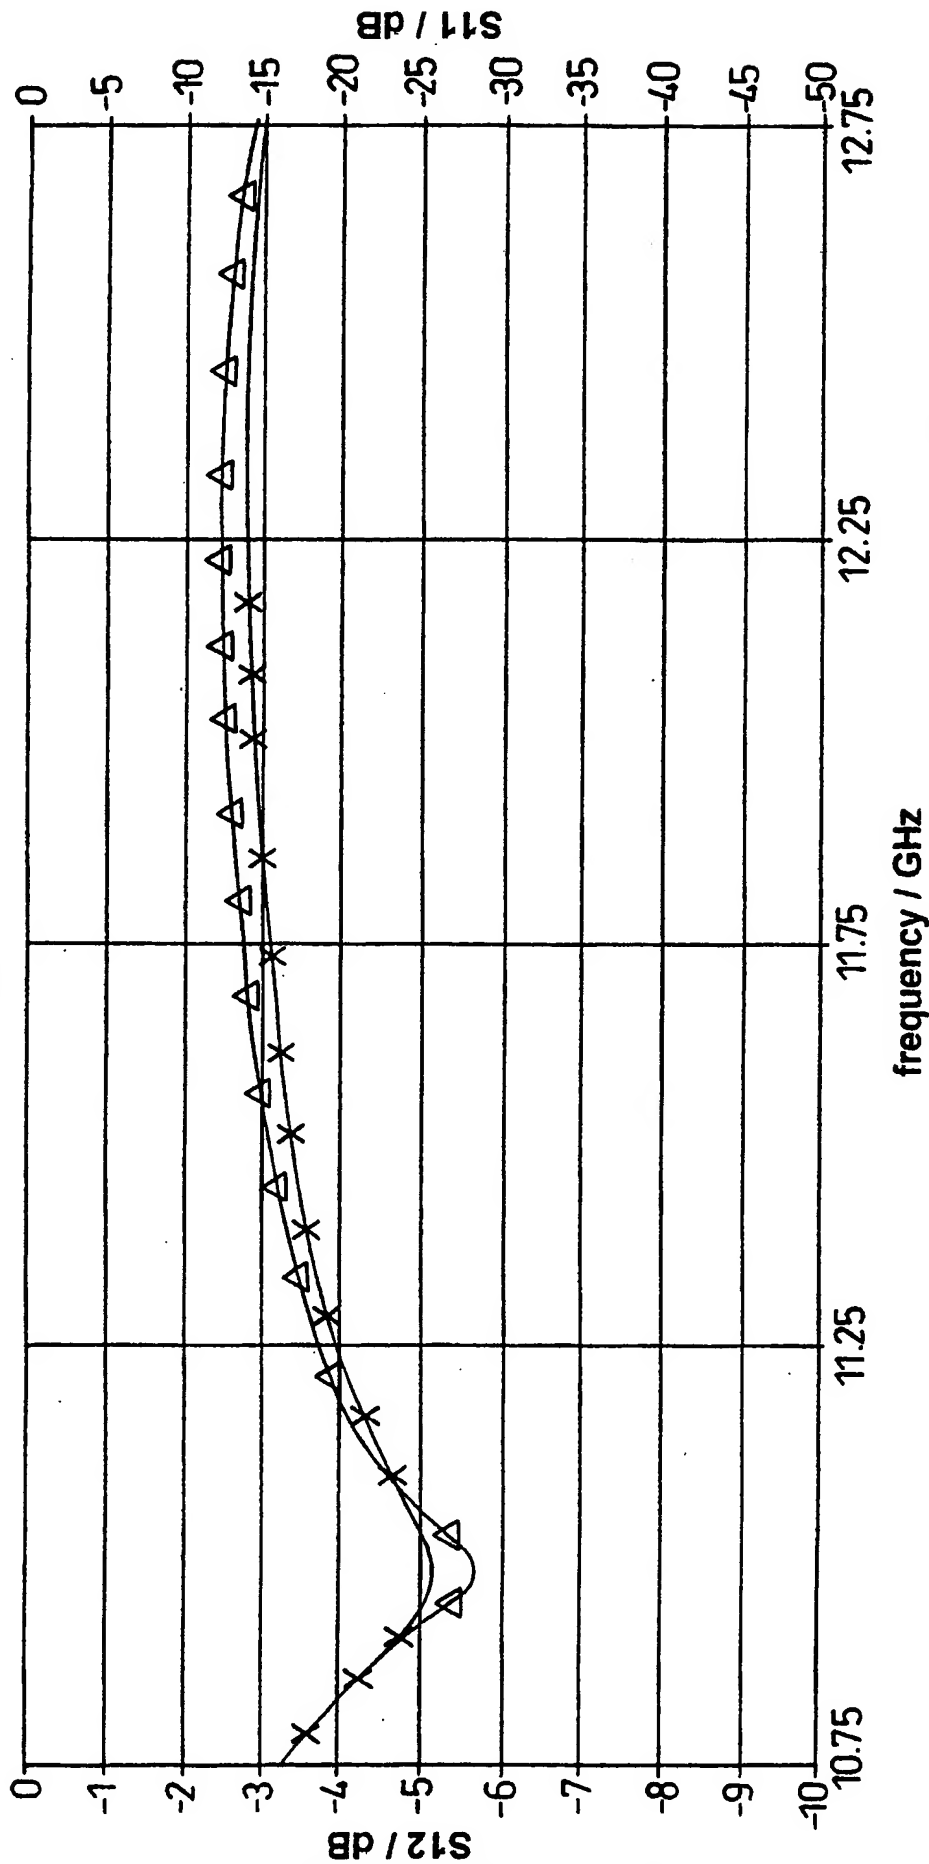

x- NORMAL WEDGE
Δ- WEDGE WITH CUT-OUTS

Fig. 18

11/11

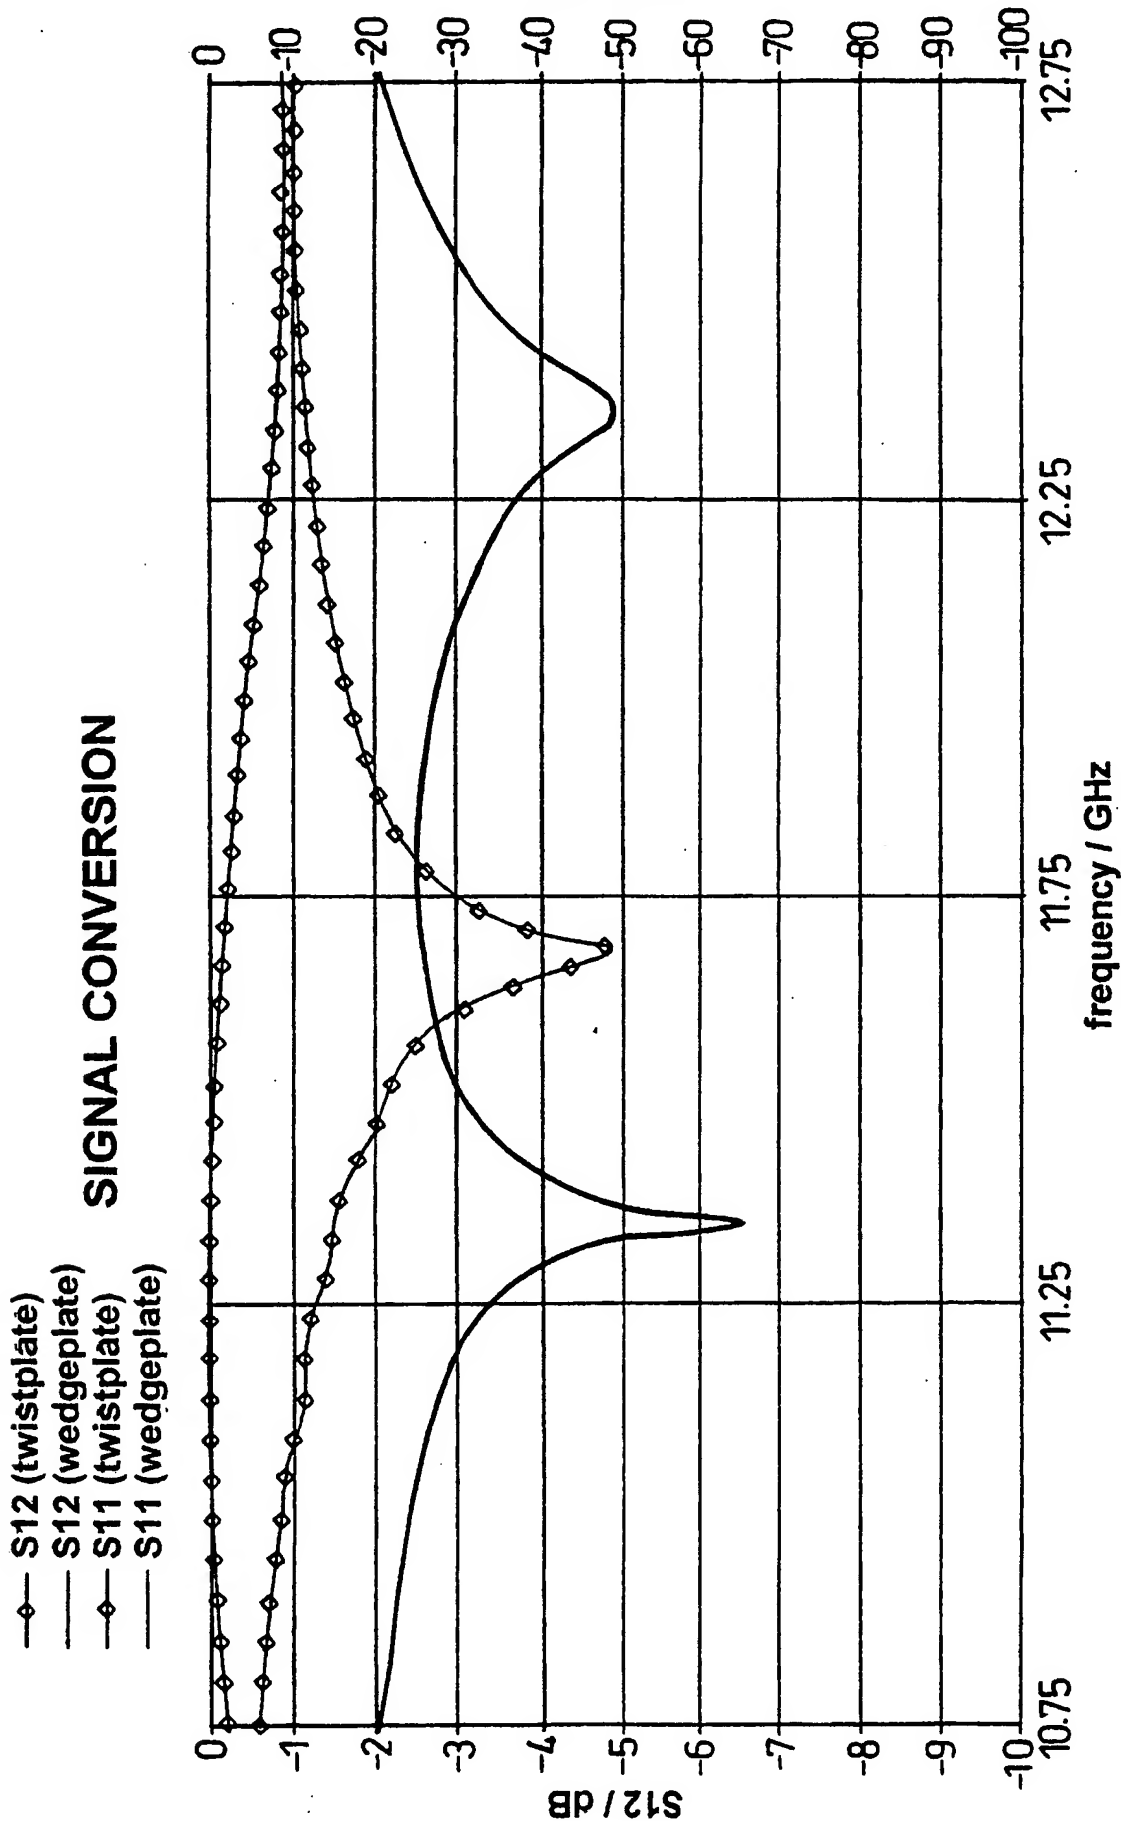


Fig. 19